


K1: triangle -> low speed
K2 and K3: double star -> high speed
S2: high speed button
S1: low speed button

* Attention:
The operating state relay must be closed during the operating states test braking, soft start, bypass and braking.
To do this, set the parameter "BetrZust" to 464 (is already the factory setting).

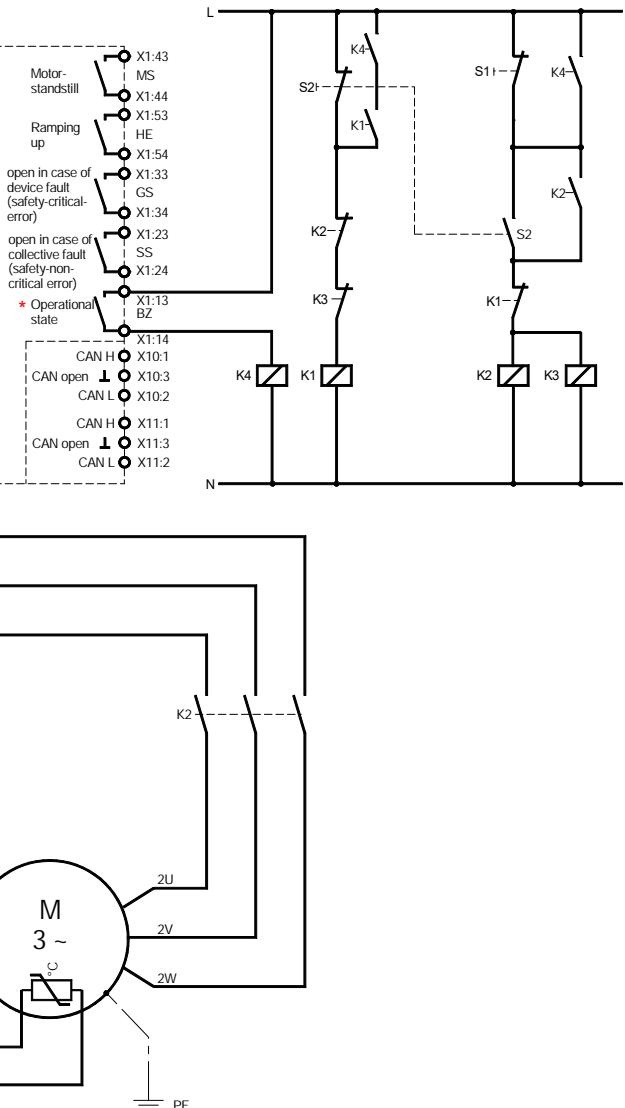

This wiring proposal has been prepared with great care. Nevertheless, PETER electronic GmbH & Co. KG does not assume liability for damage resulting from mistakes possibly contained in it.
We reserve the right to make changes due to technical improvements.

www.peter-electronic.com/

PETER electronic GmbH & Co. KG, Brückäcker 9, D-92348 Berg, Tel. (09189) 4147-0, Fax (09189) 4147-47

Motor start-brake combination VersiComb II Safe [12...60A]
with Dahlander motor

Nummer:

Verteiler:

Bearb.: A. Wein

Datum 31.08.2017

Filename: VCIIS_Dahlandermotor_EN.skf

Geändert:

Geprüft: Ti

Blatt von